

# MERCURY2 PRO SERIES ME2P-2622-15U3M NIR



Ultra small, light and robust 1.1" global shutter CMOS sensor Compatible with GenICam<sup>™</sup> and USB3 Vision<sup>®</sup> USB3.0 interface 26.2 Megapixels High definition and low cost

The MERCURY2 PRO USB3.0 series (ME2P-U3) camera is DAHENG IMAGING's high definition industrial digital camera. ME2P-2622-15U3M NIR supports Gamma, Reverse, Black Level, Flat Field Correction and more features to adapt to various vision applications, especially supporting Sharpness and Noise Reduction to improve the image quality.

ME2P-2622-15U3M NIR is a NIR enhanced USB3 Vision camera with the GMAX0505 CMOS Grade2 sensor. The sensor has optimized response in the near-infrared band. The ME2P-2622-15U3M NIR camera has opto-isolated I/Os that adapt to specific needs. Four-side mounting holes provide maximum installation flexibility for ME2P-U3. Thanks to the extremely compact design (36mm × 31mm × 38.8mm), locking screw connectors, the MERCURY2 PRO series cameras can secure the reliability of cameras deployed in harsh environments.

Featuring compact design, outstanding performance, ease of installation and use, the MERCURY2 PRO cameras are especially suitable for machine vision applications such as industrial inspection, medical, scientific research, education, security and so on.

## Features

- Programmable ROI, increased frame rate with partial scan
- Gain and exposure programmable
- Support auto gain and auto exposure
- Four acquisition controls: Single frame acquisition/Continuous acquisition/Software trigger acquisition/External trigger acquisition
- Trigger mode: Frame Start /Frame Burst Start
- Support LUTs, storable user sets, Timer and Counter
- Support Reverse X/Y, Black Level, Static Defect Correction and Flat Field Correction
- Support Binning, Decimation, Gamma, Digital Shift, Sharpness and Noise Reduction
- Support Remove Parameter Limit to expand the range of exposure, gain, and so on
- 16KB data storage area for saving algorithm coefficients, parameter configuration, and so on
- Compatible with GenICam<sup>™</sup> and USB3 Vision<sup>®</sup>, can be used in a wide range of 3rd-party software such as HALCON, MERLIC and LabVIEW directly
- Optimized software package for 32/64bit Windows, and support Linux, Android, ARMv7 and ARMv8
- Multiple samples and easy-to-integrate SDKs for various programming tools
- Regulations: CE, RoHS, GenICam, USB3 Vision



### **Performance Specifications**

| Model           | ME2P-2622-15U3M NIR                   |
|-----------------|---------------------------------------|
| Interface       | USB3.0                                |
| Resolution      | 5120(H) × 5120(V)                     |
| Frame rate      | 15.1 fps @5120 × 5120                 |
| Sensor          | 1.1", global shutter<br>GMAX0505 CMOS |
| Pixel size      | 2.5 μm × 2.5 μm                       |
| Pixel Bit Depth | 8bit, 12bit                           |
| Spectrum        | Monochrome, NIR                       |
| Exposure time   | 11µs ~ 1s                             |

# **Electrical Specifications**

| Power requirement              | 5 VDC via USB cable         |
|--------------------------------|-----------------------------|
| I/Os                           | 1 input / 1 output, 2 GPIOs |
| Data interface                 | Micro B                     |
| Power consumption <3.5W @5V DC |                             |


#### **Environmental Specifications**

| Operating temp.    | 0°C ~ +45°C   |
|--------------------|---------------|
| Storage temp.      | -20°C ~ +70°C |
| Operating humidity | 10% ~ 80%     |

#### **Mechanical Specifications**

| Weight     | 66g                                    |
|------------|--|
| Dimensions | 36(W)×31(H)×38.8(L) mm, w/o connectors |


#### **Technical Drawing**

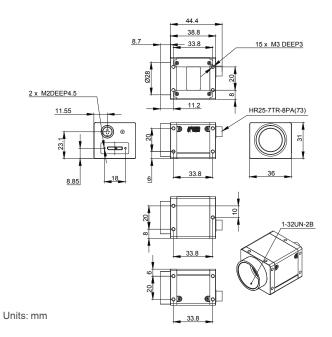

#### **Optical Specifications**

Lens mount C-Mount (standard), CS-Mount (optional)

#### **Spectral Response**

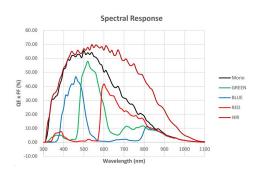

ME2P-2622-15U3M NIR

China Daheng Group, Inc. Beijing Image Vision Technology Branch

12F Daheng Science & Technology Tower, No.3 Suzhou Street, Haidian District,

Beijing China, 100080

Tel: +86 10 82828878

E-mail: isales@daheng-imaging.com

For more information please visit : www.daheng-imaging.com/en