

MERCURY SERIES

MER-130-30UM-L



- Ultra small, light and robust
- 1/1.8" Rolling CMOS sensor
- Compatible with GenICam™
- USB2.0 Interface
- 1.3 Megapixels
- Very attractive price

The MERCURY USB2.0 series(MER-U-L) camera is DAHENG IMAGING's mature area scan industrial digital camera, featuring mega pixels resolution, high definition, extremely low noise and compact design.

The MER-130-30UM-L camera is a monochrome USB camera with the Onsemi MT9M001 CMOS sensor. Thanks to the extremely compact ($29 \text{mm} \times 29 \text{mm} \times 29 \text{mm}$), robust metal housings and locking screw connectors. The MERCURY cameras can secure the reliability of cameras deployed in harsh environments.

The MER-130-30UM-L camera is powered over the USB interface. Compared to the MER-130-30UM, the MER-130-30UM-L has no I/O interfaces, so it is more light and handy. The camera has an outstanding price/performance ratio.

The MERCURY USB2.0 Series camera is especially suitable for machine vision applications such as surface inspection, alignment, defect detection, measurement, OCR, bar code and data code identification and so on. They are also suitable for desktop applications, such as microscope and documents imaging.

Features

- Programmable ROI (region of interest), increased frame rate with partial scan
- Gain and exposure programmable
- · Support auto gain and auto exposure
- Two acquisition controls: Continuous acquisition/Software trigger acquisition
- Programmable acquisition speed level, optimize multi-cameras work simultaneity
- Built-in encryption circuitry
- Robust full metal housing and optional lockable devices
- Hot plugging available
- Compatible with GenlCam[™] and GigE Vision[®], can be used in a wide range of 3rd-party software such as HALCON,
 MERLIC and LabVIEW directly
- Optimized software package for 32/64bit Windows, and support Linux
- Multiple samples and easy-to-integrate SDK for various programming tools
- Regulations: CE, RoHS, GenICam




Performance Specifications

Model	MER-130-30UM-L
Interface	USB2.0
Resolution	1280(H) × 1024(V)
Frame rate	30 fps
Sensor	1/1.8", Rolling Shutter
	Onsemi MT9M001 CMOS
Pixel size	$5.2~\mu m \times 5.2~\mu m$
Pixel Bit Depth	8bit, 10bit
Spectrum	Monochrome
Exposure time	288μs~1s

Optical Specifications

Lens mount	C-Mount (standard), CS-Mount (optional)
LCII3 IIIOUIII	o Mount (Standard), oo Mount (optional)

Technical Drawing

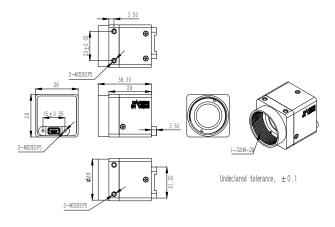

Units: mm

Electrical Specifications

Power requirement	5 VDC via USB cable
I/Os	-
Data interface	Mini B
Power consumption	<1W @5V DC

Environmental Specifications

Operating temp.	0°C ~ +45°C
Storage temp.	-20°C ~ +70°C
Operating humidity	10% ~ 80%

Mechanical Specifications

Weight	40g	
Dimensions	29(W)x29(H)x29(L)mm, w/o	connectors

Spectral Response



MER-130-30UM-L

China Daheng Group, Inc. Beijing Image Vision Technology Branch

12F Daheng Science & Technology Tower, No.3 Suzhou Street, Haidian District,

Beijing China, 100080 Tel: +86 10 82828878

E-mail: isales@daheng-imaging.com

For more information please visit: www.daheng-imaging.com/en