

MERCURY SERIES

MER-500-14U3C







- Ultra small, light and robust
- 1/2.5" Rolling Shutter CMOS sensor
- Compatible with GenICam[™] and USB3 Vision[®]
- USB3.0 Interface
- 5 Megapixels
- 2 Programmable GPIOs
- Very attractive price

The MERCURY USB3.0 series (MER-U3) camera is DAHENG IMAGING's mature area scan industrial digital camera, featuring outstanding performance, compact design and extremely low noise.

The MER-500-14U3C camera is a color USB3 Vision camera with the Onsemi MT9P006 CMOS sensor. Thanks to the extremely compact ($29 \text{mm} \times 29 \text{mm} \times 29 \text{mm}$), robust metal housings and locking screw connectors, the MERCURY cameras can secure the reliability of cameras deployed in harsh environments.

The MER-500-14U3C camera is powered over the USB interface. The MER-500-14U3C camera has opto-isolated I/Os. The GPIOs give MER-U3 maximum flexibility to adapt to specific needs. The camera has an outstanding price/performance ratio.

The MERCURY family cameras are especially suitable for machine vision applications such as industrial inspection, medical, scientific research, education, security and so on.

Features

- USB3.0 interface with 10-bit or 8-bit Bayer output
- Programmable ROI, increased frame rate with partial scan
- Gain, exposure and white balance programmable
- Support auto gain, auto exposure and auto white balance
- Support defect pixel correction
- Three acquisition controls: Continuous acquisition/ Software trigger acquisition/ External trigger acquisition
- · Flash sync for firing external lights at precisely the moment when exposure is performed
- Adjustable URB
- Software reset function
- Storable user sets
- · Robust full metal housing and optional lockable devices
- User-defined data storage area: 16KB
- Compatible with GenlCam[™] and USB3 Vision[®], support a variety of 3rd-party software such as HALCON, MERLIC and LabVIFW
- Optimized software package for 32/64bit Windows, and support Linux, Android, ARMv7 and ARMv8
- Multiple samples and easy-to-integrate SDKs for various programming tools
- Regulations: CE, RoHS, FCC, GenlCam, USB3 Vision




Performance Specifications

Model	MER-500-14U3C
Interface	USB3.0
Resolution	2592(H) × 1944(V)
Frame rate	14 fps
Sensor	1/2.5",Rolling Shutter Onsemi MT9P006 CMOS
Pixel size	$2.2~\mu m \times 2.2~\mu m$
Pixel Bit Depth	8bit, 10bit
Spectrum	Color
Exposure time	36μs ~ 1s

Optical Specifications

Lens mount	C-Mount (standard), CS-Mount (optional)

Technical Drawing

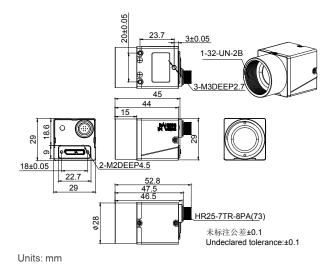

Electrical Specifications

Power requirement	5 VDC via USB cable	
I/Os	1 input / 1 output, 2 GPIOs	
Data interface	Micro B	
Power consumption <2W @5V DC		


Environmental Specifications

Operating temp.	0°C ~ +45°C
Storage temp.	-20°C ~ +70°C
Operating humidity	10% ~ 80%

Mechanical Specifications

Weight	57g
Dimensions	29(W)×29(H)×29(L)mm, w/o connectors

Spectral Response

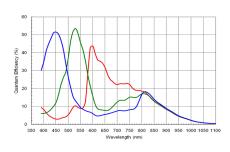

MER-500-14U3C

China Daheng Group, Inc. Beijing Image Vision Technology Branch

12F Daheng Science & Technology Tower, No.3 Suzhou Street, Haidian District,

Beijing China, 100080 Tel: +86 10 82828878

E-mail: isales@daheng-imaging.com

For more information please visit: www.daheng-imaging.com/en