

MARS-3250-12U3M/C

MARS USB3.0 Series 32.5MP CMOS USB3.0 Area Scan Camera



The MARS-3250-12U3M/C camera is a monochrome/color GigE Vision camera with the ON XGS32000 CMOS sensor. Thanks to locking screw connectors, the MARS cameras can secure the reliability of cameras deployed in harsh environments. The MARS-3250-12U3M/C camera has opto-isolated I/Os. The GPIOs give MARS-U3 cameras maximum flexibility to adapt to specific needs.

Applications

Suitable for machine vision applications such as industrial inspection, medical, scientific research, education, security and so on.

Features

- Trigger mode: Frame Start /Frame Burst Start
- Two exposure time modes: Standard exposure time mode / UltraShort exposure time mode
- Support Timed exposure mode and TriggerWidth exposure mode
- Support Gamma, Binning, Decimation, Digital Shift, Black Level, Flat Field Correction and Static Defect Correction
- Color models support Light source preset, Color Transformation Control and Saturation
- Monochrome models support Sharpness and Noise Reduction
- Programmable LUTs and storable user sets
- Support Timer and Counter
- Support Remove Parameter Limit to expand the range of exposure, gain, white balance, and so on
- 16KB data storage area for saving algorithm coefficients and parameter configuration

Specifications


Model	MARS-3250-12U3C	MARS-3250-12U3M
Resolution	6576(H) × 4940(V)	
Sensor	ON XGS32000 Global shutter CMOS	
Sensor Format	APS-C	
Pixel Size	3.2μm × 3.2μm	
Frame Rate	12.1 fps	
ADC	12 bit	
Pixel Bit Depth	8 bit, 12 bit	
Mono/Color	Color	Mono
Pixel Formats	Bayer RG8 / Bayer RG12	Mono8 / Mono12
SNR	39.56 dB	39.61 dB
Exposure Time	Standard: 162μs ~ 1s(RemoveParameterLimit to expand the shutter time to 15s), Actual Steps: 1 row period; UltraShort: 92μs ~ 161μs, Steps: 1μs	
Gain	0dB ~ 24dB; Default: 0dB, Steps: 0.1dB	
Binning	1×1, 1×2, 1×4, 2×1, 2×2, 2×4, 4×1, 4×2, 4×4	
Decimation	Sensor: 1×1, 1×2, 2×1, 2×2	
Synchronization	Hardware trigger, software trigger	
Acquisition Mode	Single frame, Continuous, Software trigger, Hardware trigger	
Reverse X/Y	Reverse X/Y	
I/O Interface	1 input and 1 output with opto-isolated, 2 programmable GPIOs	
Data Interface	USB3.0	
Power Supply	12VDC-10% ~ 24VDC+10%	
Power Consumption	< 5.6 W @ 24 VDC	
Operating Temp.	0°C ~ +45°C	
Storage Temp.	-20°C ~ +70°C	
Operating Humidity	10% ~ 80%	
Lens Mount	M42 / F	
Dimensions	62(W) × 62(H) × 53.77(L) mm (without lens adapter)	
Weight	308 g	
Software	3rd-party software such as HALCON, MERLIC and LabVIEW	
OS	32bit / 64bit Windows, Linux, Android, ARMv7, ARMv8	
Conformity	CE, RoHS, FCC, ICES, UKCA, USB3 Vision®, GenICam®	

I/O Interface





Pin	Definition	Core Color	Description
1	Line0+	Green	Opto-isolated input +
2	GND	Blue	PWR GND & GPIO GND
3	Line0-	Grey	Opto-isolated input -
4	POWER_IN	Purple	Camera external power, +12V DC(-10%)~+24V DC(+10%)
5	Line 2	Orange	GPIO input/output
6	Line3	Pink	GPIO input/output
7	Line1-	White Green	Opto-isolated output -
8	Line1+	White Blue	Opto-isolated output +
9	NC1	White Greg	Not connected, reserved
10	GND	White Purple	PWR GND & GPIO GND
11	NC2	White Orange	Not connected, reserved
12	NC3	White Pink	Not connected, reserved

Spectral Response

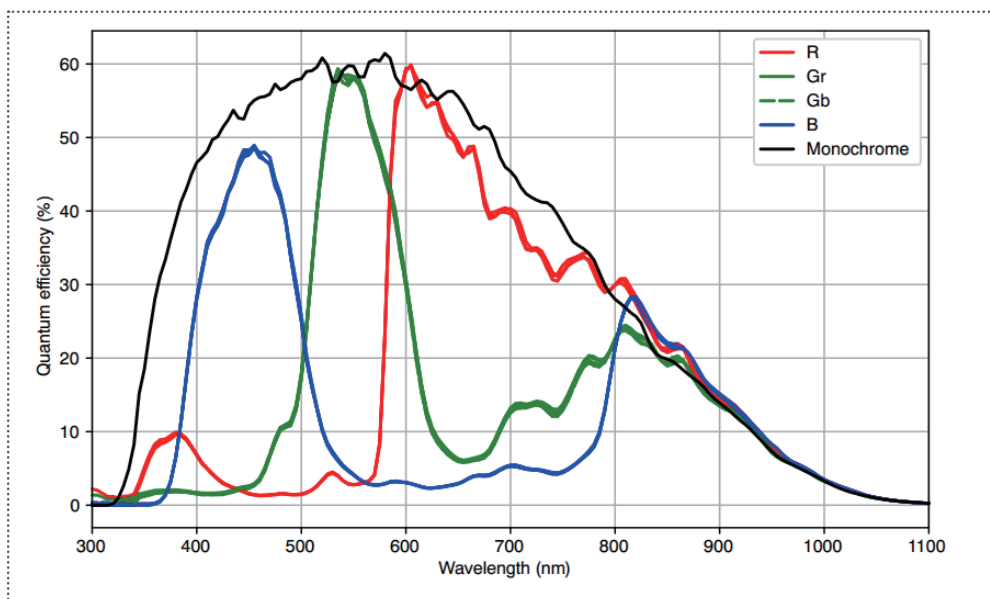

Technical Drawing

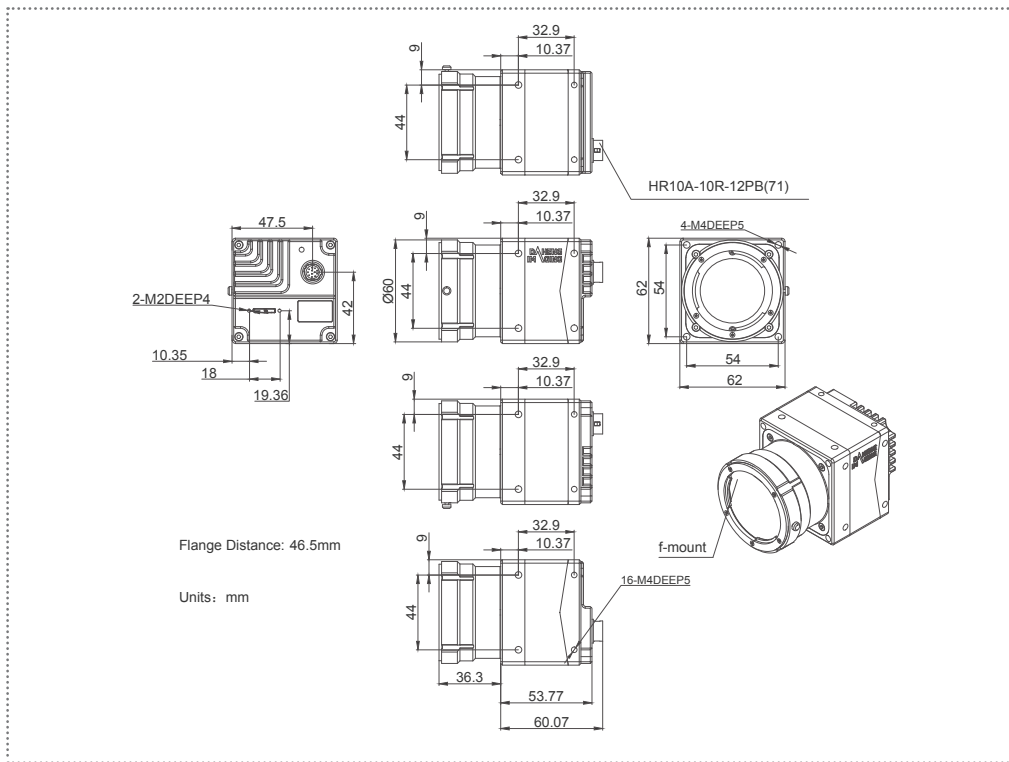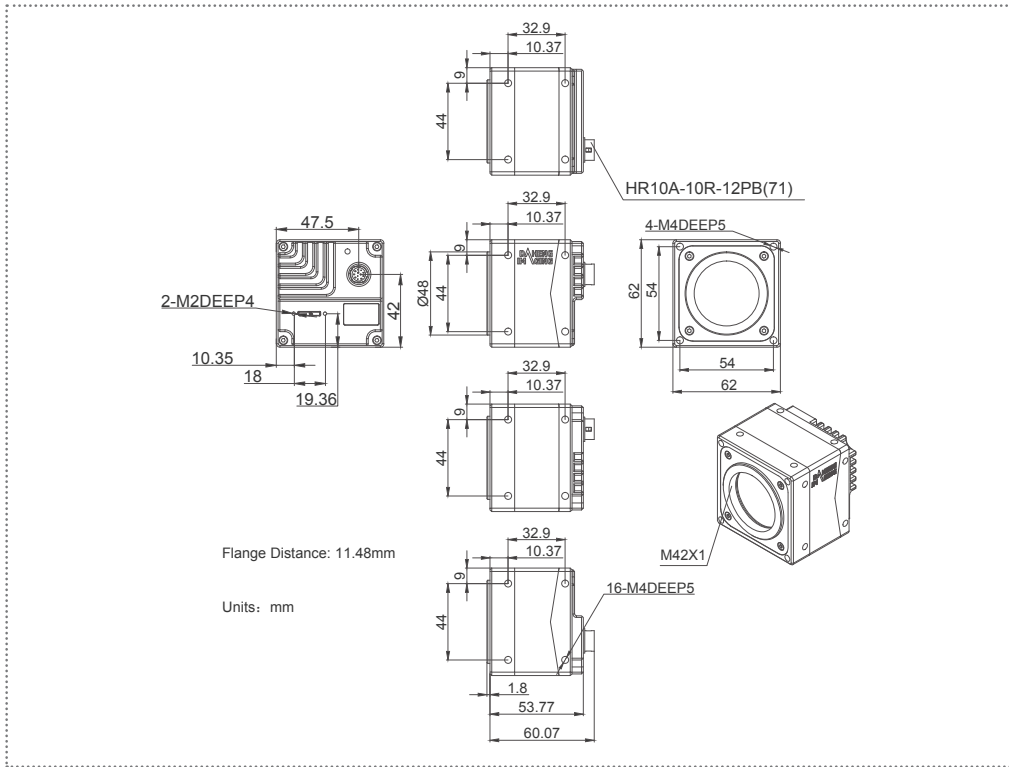

China Daheng Group, Inc. Beijing Image Vision Technology Branch

12F Daheng Science & Technology Tower, No.3 Suzhou Street, Haidian District, Beijing China, 100080

Tel: +86 10 82828878

E-mail: isales@daheng-imaging.com